



POSMARKET.COM.MY

Budget and Powerful

Door Access User Guide Manual

Table of Content

1. Add Users	3
1.1 Change Master Code	3
1.2 Add Card.....	3
1.3 Add ID number+ card	3
2. Delete Users	4
2.1 Delete Card.....	4
2.2 Delete ID Number	4
3. Public Code	5
3.1 Add Public Code.....	5

Add Users



Change Master Code

Enter * [Master Code] # and the light indicator will turn **Green** and enter 0 [New Code] #

Note: Default Factory Master Code is 999999.

Add Card

Enter * [Master Code] # and Enter 1 [Tap Card on Keypad] # [If needed] #

Note: [If needed] = Cards can be added continuously

Add ID number+ card

Enter * [Master Code] # and Enter 1 [ID Number] # [Tap Card] #

Note: Add user with specify ID number, easily find, and delete.

Delete Users

Delete Card

Enter * **[Master Code]** # and Enter 2 [**Tap Your Card or Enter Your Card Number**] #
[If needed] #

Note: Cards can be deleted continuously

Delete ID Number

Enter * **[Master Code]** # and Enter 2 **[ID Number]** #

Note: When the card is broken or Lost, you can delete the user by ID Number

Public Code

Add Public Code

Enter * **[Master Code]** # and Enter 9 **[4 digits Code]** #

Note: Only One Public Code is available.

Delete Public Code: Enter * **Master Code** # 9 #